




jura[®]

Edelstahl Isolier-Milchbehälter
Stainless steel vacuum milk container
Récipient à lait isolant en acier inox
Contentitore termico in acciaio inox per il latte
Roestvrijstalen isoleer-melkhouder
Termo de leche en acero inoxidable
Reservatório térmico de leite em aço inoxidável
Isolerad mjölkbehållare

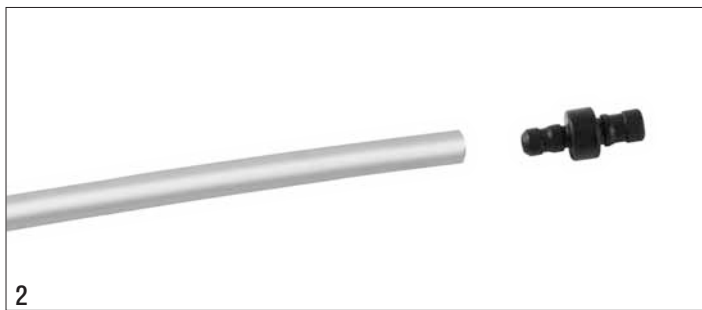

- The stainless steel vacuum milk container and lid are NOT dishwasher safe.
- Wash the stainless steel vacuum milk container thoroughly prior to first use.
- Before drawing off milk or cappuccino, check whether there is sufficient milk in the stainless steel vacuum milk container.
- Cold milk will remain cool in the sealed stainless steel vacuum milk container for approx. 8 hours. The full insulating capability will only be achieved if the stainless steel vacuum milk container is filled to the brim and is well sealed.
- If there is any milk over after use, pour this into another receptacle and keep it in the fridge.
- NEVER put any ice cubes or carbonated liquids in the stainless steel vacuum milk container.
- Protect the stainless steel vacuum milk container against sources of heat such as hotplates etc.
- The stainless steel vacuum milk container can be damaged if allowed to fall.
- ALWAYS clean the stainless steel vacuum milk container after use. Rinse it with warm water and, if necessary, use washing-up liquid. Remove the rising pipe inside the milk container and the hose connection on the outside of the container and rinse these parts thoroughly, including lid, with clean water. Under no circumstances should you use scouring agents, bleach, solvents or coarse floor cloths.

When the stainless steel vacuum milk container is not in use, keep it OPENED.

- The stainless steel vacuum milk container comes supplied with a hose set comprising two 120 mm hoses (fitted on either side with a connecting fitting) and another hose 360 mm long. The container can be positioned somewhat further away from the machine if the longer hose is used. However, you can also cut this hose into 3 spare hoses each 120 mm long (Figure 1). In this case, insert the connecting fitting as shown below (Figure 2).
- Please note that before the inlet pipe can be attached to the lid, the transparent rubber seal must be inserted into the opening as far as the end stop. Then insert the inlet pipe into the rubber seal as far as the end stop (Figures 3a + b).